

Dear partners!

We would like to draw your attention to the correct installation of the hose fittings in the peristaltic dosing pump. Hose fittings: art. 03-25-001-00.

Nozzles of hose fittings have two collars to fix them in the pump cover: a large and a small one. Both collars have a rounded shape on one side, and a straight one on the opposite side.

The nozzles must be installed in the socket of the pump cover with the rounded part of the collar faced downwards so that after the nozzle is installed, the visible part of the collars at the top will be straight.

The figure below shows the correct and incorrect installation of the nozzle in the socket of the pump cover.

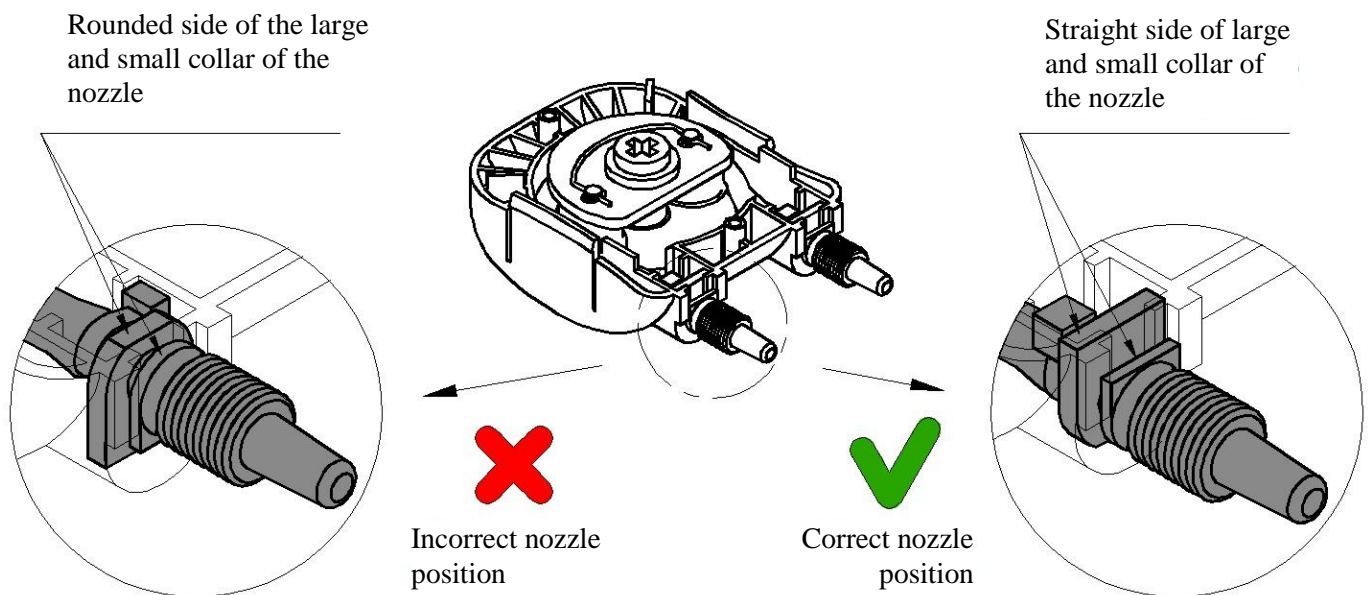


Fig. 1 Installation of the hose fittings in the peristaltic dosing pump

We also remind you to lubricate the peristaltic hose with silicone.

Best regards, DARIN